



SOLAREVER Flat roof structure(double array) installation guide

1. Drill holes on the concrete block and fix the Pro tilt 2V(7) on the block by expansion screw(1).
2. Put rails(6) on the triangle support and fix them with Rails Clamp(3)
3. Put panels on rail
4. Slid or click end clamp(4) into rail and fix
5. Slid the panels together and Slid or click middle clamp(5) into rail and put grounding Clip under two panels and then fix on rail.
6. install 2 pcs Grounding lugs(2) to the rails. Each line install one pcs.

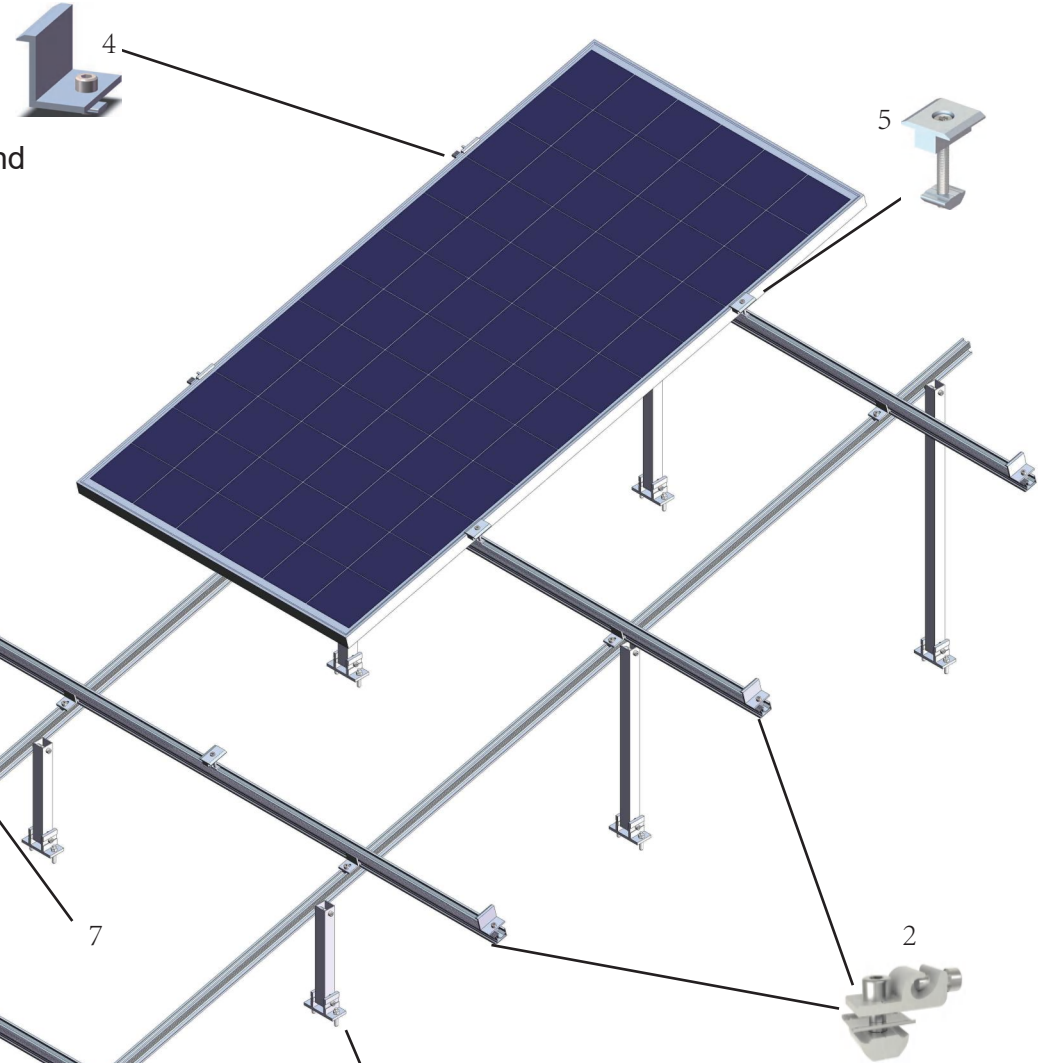

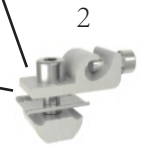








1. Hacer agujeros en el bloque de hormigón y fijar el Pro tilt 2V (7) en el bloque mediante el tornillo de expansión (1).
2. Coloque los rieles (6) en el soporte triangular y fíjelos con la abrazadera de rieles (3)
3. Coloque los paneles en el riel.
4. Deslice o haga clic en la abrazadera del extremo (4) en el riel y fíjela.
5. Deslice los paneles juntos y deslice o haga clic en la abrazadera central (5) en el riel y coloque el clip de conexión a tierra debajo de dos paneles y luego fíjelo al riel.
6. Instale 2 terminales de conexión a tierra (2) en los rieles. Cada línea instale una unidad.



Item No	Name	Quantities
1	expension screws	14
2	Grounding Lug	2
3	Rail clamp	8
4	end clamp	8
5	middle clamp	4
6	rail	4
7	Pro Tilt 2V	2

Combination for Pro Tile 2V

Item No	Articles	Image	Quantities
1	CG-010 Rail 3500mm		1
2	support pole 303mm		1
3	support pole 568mm		1
4	support pole 832mm		1
5	L foot without screw		6
6	L foot with rail screw		1
7	Screw with rail bolt		3
8	Screw with normal bolt		3
9	Expension bolt		7

